▲ WARNING

momentarily release the lever.

• The 203 mm and 180 mm rotors provide a higher braking force than the 160 mm rotors. Make

sure that you have a complete feel for the braking characteristics before using the brakes.
 Please use extra caution to keep your fingers away from the rotating disc brake rotor during installing or servicing the wheel. The rotor is sharp enough to inflict severe injury to your fingers if caught within the openings of moving

- The calipers and rotor will become hot when the brakes are operated, so do not touch them while riding or immediately after dismounting from the bicycle, otherwise you may get burned. Check that the brake components have cooled down sufficiently before attempting to adjust the
- brakes.

 The required braking distance will be longer during wet weather.
- Reduce your speed and apply the brakes early and gently.

 If the road surface is wet, the tires will skid more easily. If the tires skid, you may fall off the
- Notice that the front and rear brakes are working correctly before you ride the Always make sure that the front and rear brakes are working correctly before you ride the
- Be careful not to allow any oil or grease to get onto the rotor and brake pads, otherwise the brakes may not work correctly.
- or of the pads. If any oil or grease do get on the pads, you should replace the pads. If any oil or grease gets on the rotor, you should clean the rotor. If this is not done, the brakes may not work correctly.

 Vapor lock may occur if the brakes are applied continuously. To relieve this condition,

Vapor lock is a phenomenon in which the oil inside the brake system becomes heated, which causes any water or air bubbles inside the brake system to expand. This can then result in a sudden increase in the brake lever stroke.

- Use only genuine Shimano mineral oil. If other types of oil are used, it may cause problems
- with brake operation, and cause the system to be unuseable Be sure to use only oil from a freshly-opened container, and do not re-use oil which has been
- orained from the bleed nipple. Old oil or already-used oil may contain water which could cause vapor lock in the brake system.

 Be careful not to let water or air bubbles to get into the brake system, otherwise vapor lock may
- occur. Be particularly careful when removing the cover of the reservoir tank.

 When turning the bicycle upside down or on its side the brake system may have some air • When turning the bicycle upside down of or his side the brake system may have some air bubbles inside the reservoir tank which are still there when the reservoir tank cover is replaced, or which accumulate in various parts of the brake system when it is used for long periods. The M775 disc brake system is not designed to be turned upside down. If the bicycle is turned upside down or on its side, the air bubbles inside the reservoir tank may move in the direction of the calipers. If the bicycle is ridden in this condition, there is the danger that the brakes may not expected and a conjunct accident equil court. not operate and a serious accident could occur
- If the bicycle has been turned upside down or on its side, be sure to operate the brake lever a few times to check that the brakes operate normally before riding the bicycle. If the brakes do not operate normally, adjust them by the following procedure.

< If brake operation is sluggish when the lever is depressed >

Gently depress the brake lever several times and wait for the bubbles to return to the reservoir tank. It is recommended that you then remove the reservoir tank cover and fill the reservoir tank with mineral oil until no bubbles remain.

If the brakes still operate sluggishly, bleed the air from the brake system. (Refer to "Adding the mineral oil and bleeding air".)

- If fluid leaks occur, immediately stop using the brakes and carry out the appropriate repairs. If you continue riding the bicycle while fluid is leaking, there is the danger that the brakes may suddenly stop working.
 • Check that the quick release lever is on the right side (the opposite side to the rotor). If the
- Check that the quick release lever is on the right side (the opposite side to the rotor). If the quick release lever is on the same side as the rotor, there is the danger that it may interfere with the rotor, so check that it does not interfere.
 It is important to completely understand the operation of your bicycle's brake system. Improper use of your bicycle's brake system may result in a loss of control or an accident, which could lead to severe injury. Because each bicycle may handle differently, be sure to learn the proper braking technique (including brake lever pressure and bicycle control characteristics) and operation of your bicycle. This can be done by consulting your professional bicycle dealer and the bicycle's owners manual, and by practicing your riding and braking technique.

 Obtain and read the service instructions carefully prior to installing the parts. Loose, worn, or damaged parts may cause injury to the rider.
- We strongly recommend only using genuine Shimano replacement parts.

 Read these Technical Service Instructions carefully, and keep them in a safe place for later

▲ CAUTION

A01S brake pads are designed to reduce the amount of noise which is generated between the pads and the rotor when the brakes are operated. A longer running-in period is required for this type of pad compared to M06 pads.



- Handling the mineral oil • Use safety glasses when handling, and avoid contact with eyes. Contact with eyes may result in
- In the event of eye contact, flush with fresh water and seek medical assistance immediately Use gloves when handling. Contact with skin may cause a rash and discomfort.
 In the event of skin contact, wash well with soap and water.

 Inhalation of oil mist or vapors may cause nausea. Cover nose and mouth with a respirator type.
- mask and use in a well ventilated area. If mist or vapor is inhaled, go immediately to an area with fresh air. Cover up with a blanket.

- Stay warm and stable and seek professional medical advice.

 Do not drink. May cause vomiting or diarrhea.

 Keep out of reach of children.

 Do not cut, heat, weld or pressurize the oil container, as this may cause explosion or fire.
- Disposal of Used Oil: Follow local county and/or state codes for disposal. Use care when preparing oil for disposal.

 • Directions: Keep the container sealed to prevent foreign objects and moisture from getting inside, and store it in a cool, dark area away from direct sunlight or heat.

■ Burn-in period

• Disc brakes have a burn-in period, and the braking force will gradually increase as the burn-in period progresses. Make sure that you are aware of any such increases in braking force when using the brakes during the burn-in period. The same thing will happen when the brake pads or

■ When cleaning with a compressor

If disassembling the caliper body to clean the internal parts using a compressor, note that
moisture from the compressed air may remain on the caliper components. Let the caliper
components dry sufficiently before reassembling the calipers.

Technical Service Instructions

SI-8EP0A-003

Disc Brake System



In order to realize the best performance, we recommend that the following combination be used.

| Caliper | BR-M775 BR-M7 | 76 Cable Supporte | Cable Supporter | |
|-------------|-----------------|-------------------|-----------------|------|
| Hose | SM-BH59 SM-BH | 63 Mineral Oil | Mineral Oil | |
| Rotor | SM-RT78 | Brake pad unit | Resin Pads | A018 |
| Brake Lever | ST-M775 / BL-M7 | 75 Brake pad unit | Metal Pads | M06 |

- The 203 mm and 180 mm rotors have a larger diameter than the 160 mm and 140 mm rotors for cross-country bicycles, and so the flexing of these rotors is greater. As a result, they will interfere with the brake pads.
- If the brake caliper mounting boss and the dropout are not parallel, the rotor and
- If the brake caliper mounting boss and the dropout are not parallel, the rotor and caliper may touch.
 When the bicycle wheel has been removed, it is recommended that pad spacers should be installed. The pad spacers will prevent the piston from coming out if the brake lever is depressed while the wheel is removed.
 If the brake lever is depressed without the pad spacers installed, the pistons will
- protrude further than is normal. Use a flat-tipped screwdriver or similar tool to push back the brake pads, while being careful not to damage the surfaces of the brake pads. (If the brake pads are not installed, push the pistons straight back in, while being careful not to damage them.)
- If it is difficult to push the brake pads or pistons back, remove the reservoir tank cover and then try again. (Note that some oil may overflow from the reservoir
- Use isopropyl alcohol, soapy water or a dry cloth when carrying out cleaning and maintenance of the brake system. Do not use commercially-available brake cleansers or silencing agents, as they can cause damage to parts such as
- Do not remove the pistons when disassembling the caliners
- If the rotor is worn, cracked or warped, it should be replaced.
 Parts are not guaranteed against natural wear or deterioration resulting from
- normal use.
 For maximum performance we highly recommend Shimano lubricants and maintenance products.

Installation


The following tools are needed to assemble this product.


| Usage location | Tool | |
|---------------------------------|------------------------------|--|
| Rotor fixing lock ring | TL-LR15 | |
| Brake lever fixing bolt | Allen key 4 mm | |
| Caliper fixing bolt | Allen key 5 mm | |
| Adapter (post type) fixing bolt | Allen key 5 mm | |
| Brake pad fixing shaft | Allen key 3 mm | |
| Reservoir tank cover | Phillips screwdriver #1 | |
| Cable supporter | Phillips screwdriver #2 | |
| Brake hose fixing bolt | 8 mm wrench / Allen key 3 mm | |
| Bleed nipple | Socket wrench 7 mm | |

■ Wheel spoke lacing

Check that the spokes have been laced as shown in the illustration A radial assembly cannot be used.

Lace the spokes as shown in Figure 1 below for the left side of the front wheel (the side where the rotor is installed), and the left and right sides of the rear

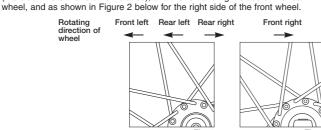

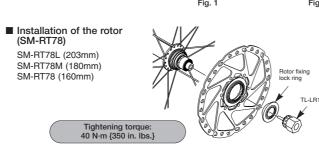




Brake lever Tightening torque 6 - 8 N·m {53 - 69 in. lbs.}

Secure the brake lever as shown in the illustration. (Check that the brake lever does not interfere with the shifting lever during operation. Refer to the Service Instructions for the shifting lever also. Some types might require the shifting lever to be installed first, due to the position of the shifting lever fixing bolts.) Brake lever Tightening torque 6 - 8 N·m {53 - 69 in. lbs.}

In the case of carbon handlebars, it may be necessary to lower the tightening torque in order to prevent damage to the handlebar. Please consult the bicycle or handlebar manufacturer regarding the appropriate level of tightening torque for carbon handlebars.


■ Installation of the hose

For left lever ST-M775

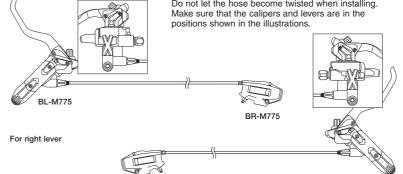

< BR-M776 / SM-BH63 >


Refer to the Service Instructions for the SM-BH63 brake hose (SI-8H40) for details on installing the hose. Do not let the hose become twisted when installing.

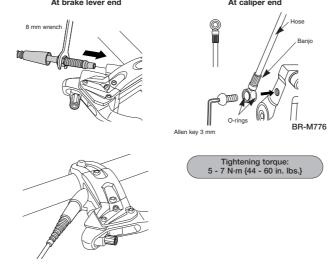

■ Installation of the calipers (BR-M775 / M776) and securing the hose.

• Remove the spacer for bleeding (yellow), and then set the wheel which has the rotor onto the


. Install the brake pads.

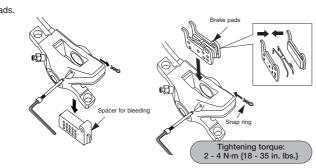


For international-standard mounts, attach adapters to calipers for post-type mounts. (Separate front and rear adapters are available.)

- 1. Loosen the caliper fixing bolts so that the caliper can move sideways, and then install the
- 2. Depress the brake lever so that the rotor is being clamped by the pads, and then tighten the


International standard mounting type

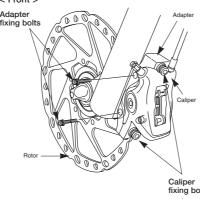

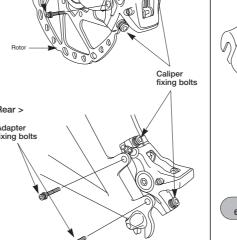



Post mounting type

Provisionally install the caliper to the frame (so that the caliper can move sideways), depress the brake lever so that the rotor is being clamped by the pads, and then tighten the caliper fixing

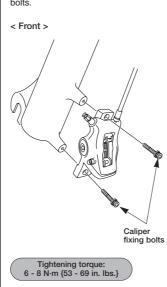

 Install the accessory caps as shown in the illustration to prevent the bolts from loosening.

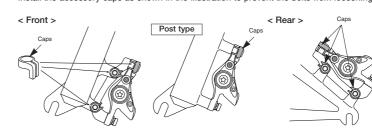



Operate the brake lever several times and check whether the brakes operate normally or not. Also check that there are no oil leaks visible

■ Brake pad replacement

Note: The M775 brake system is designed so that as the brake pads become worn, the pistons gradually move outward to automatically adjust the clearance between the rotor and the brake pads. Therefore, you need to push the pistons back to their original positions when replacing the brake pads.

 
If oil adheres to the brake pads after oil is added, or if the brake pads are worn down to a thickness of 0.5 mm. or if the brake pad presser springs are interfering with the rotor, replace the brake pads.

1. Remove the wheel from the frame, and remove the


2. Clean the pistons and surrounding area.

brake pads as shown in the illustration

3. Remove the reservoir tank cover while referring to the step (1) in "Adding mineral oil".





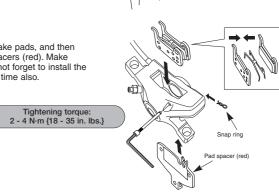

- 6. Depress the brake lever several times to check that the operation becomes stiff.
- 7. Remove the pad spacers, install the wheel, and then check that there is no interference between the rotor and the caliper. If they are touching, adjust while referring to "Installation of the caliper".
- 8. After checking the oil level, replace the reservoir tank cover.
- 9. Return the brake lever to its original position


■ Adjustment when the pistons are not operating correctly

The caliper mechanism includes two pistons. If these pistons do not operate properly or if they protrude unevenly, or if the brake pads remain in contact with the rotor, adjust the pistons by the following procedure.

- 1. Remove the wheel and the brake pads.
- Clean the pistons and surrounding area, and remove the reservoir tank cover.
- ${\bf 2.} \ {\bf Push} \ the \ piston \ back \ in \ straight, \ without \ bending \ it. \ Note \ that \ some \ oil \ may \ overflow$
- 3. Install the brake pads and the pad spacers (red). ${\bf 4.}$ Depress the brake lever as far as it will go, and then operate it several more times so
- that the two pistons all move to their initial positions.
- Remove the pad spacers, install the wheel, and then check that there is no interference between rotor and the calipers. If they are touching, adjust using shims.
- ${\bf 6.}$ After checking the oil level, replace the reservoir tank cover.


■ Reach adjustment

Tighten the reach adjustment bolt (clockwise direction) to make the reach narrower, and loosen it (counterclockwise direction) to make the reach wide

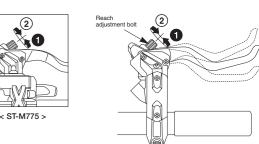

■ Free stroke adjustment

When the free stroke adjustment screw is loosened, the free stroke of the brake lever will increase, so that you can adjust it to the desired setting.

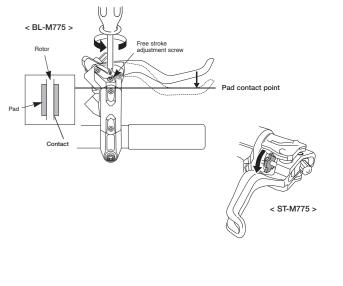

■ Mineral oil replacement

Brake pads

It is recommended that you replace the oil inside the reservoir tank if it becomes

Attach a tube with a bag to the bleed nipple, and then open the bleed nipple and drain out the oil. You can operate the brake lever at this time to help the oil to drain out. After draining the fluid, pour in fresh brake fluid while referring to "Adding the mineral oil and bleeding air". Use only genuine Shimano mineral oil. Dispose of the waste oil according to proper country and/or state disposal

Be sure to read the service instructions for the "Adding mineral oil and bleeding air" in conjunction with these service instructions.

This service instruction explains how to use and maintain the Shimano bicycle

parts which have been used on your new bicycle.
For any questions regarding your bicycle or other matters which are not related to Shimano parts, please contact the place of purchase or the bicycle manufacturer.

SHIMANO

SHIMANO EUROPE B.V.
Industrieweg 24, 8071 CT Nunspeet, The Netherlands Phone: +31-341-272222 SHIMANO INC.
3-77 Oimatsu-cho, Sakai-ku, Sakai-shi, Osaka 590-8577, Japan

Please note: specifications are subject to change for improvement without notice. (English) © Jul. 2007 by Shimano Inc. XBC IZM Printed in Japan.



ANG -OIL

< BR-M775 / SM-BH59 >

Refer to the Service Instructions for the SM-BH59 brake hose (SI-8H20) for details on installing the hose Do not let the hose become twisted when installing Make sure that the calipers and levers are in the positions shown in the illustrations.



