 
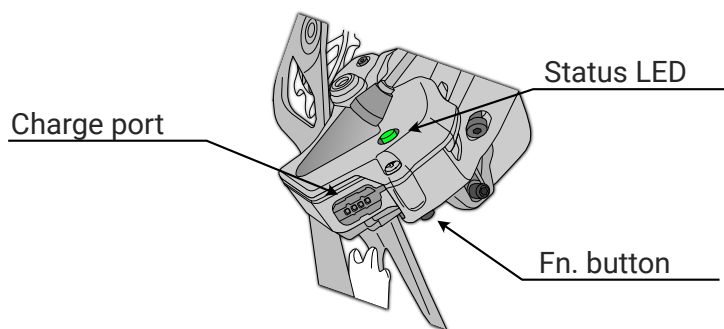 


Rear Derailleur

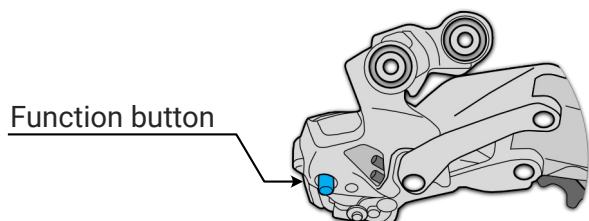

System Battery Check

Press the **function button** on the **rear derailleur** for **0.5s** or less.

The LED will then indicate the battery charge level.




bettershifting.com/battery


100% - 51%		Solid green (3 seconds)
50% - 26%		Flashing green (8 times)
25% - 1%		Solid red (3 seconds)

Shifter Battery Check

 Press **both** buttons on a single shifter for **0.5s**. The shifter LED will indicate the battery level.

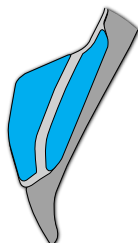

100% - 11%		Yellow/green
10% - 1%		Red
0%		Off

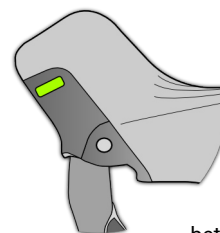 

bettershifting.com/battery

Synchronized Shift

To change to the next shift mode, press the **function button** twice.

Shift Mode 1 is usually set to **Semi Synchronized** shift, while the default for **Shift Mode 2** is **Full Synchronized** shift.




bettershifting.com/shiftmode

Manual Shift		Solid blue
Shift Mode 1		Flashing (2 times)
Shift Mode 2		Flashing (3 times)

Adjustment mode

 Press the **function button** for **2-5 seconds** to enter **derailleur adjustment mode**.

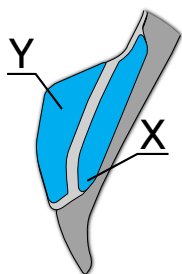

The **Y-button** moves the derailleur **away** from the frame.

The **X-button** moves the derailleur **towards** the frame.



bettershifting.com/adjustment

 
Visit the adjustment page for info on how to adjust the front derailleur.

When done, press the **function button** for **0.5s** to exit **adjustment mode**.

Bluetooth Connection Mode

Press the **function button** for **0.5-2 seconds** to trigger **Bluetooth Connection Mode**.

The LED will flash while the bike is in **Bluetooth Connection Mode** (30 seconds).

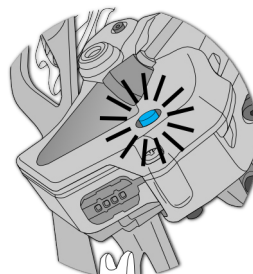

bettershifting.com/bluetooth